


# LucaLight™ LED IMPORTANT SAFETY INSTRUCTIONS


## Integrated Parts

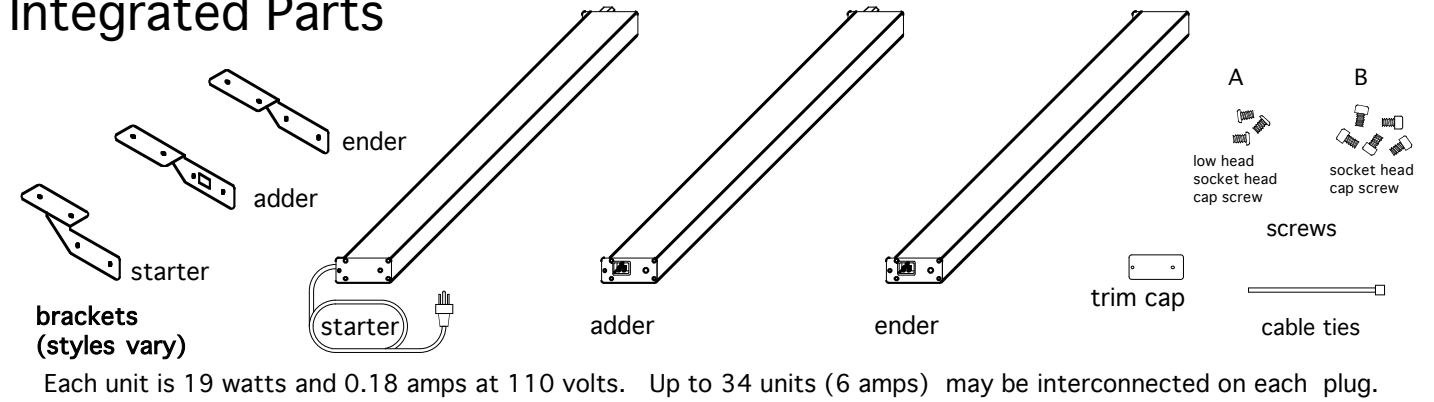

## Integrated Undermount Installation

### step 1

Starting at the end of the range closest to the power feed/outlet. Locate the bracket to maximize the light at the shelves. Attach the starter fixture to the brackets by fixing it in place with screws **A** (include the trim cap at ends) on the left side and screw **B1** in the front most hole on the right side. For ADA compliance, keep leading edge of fixture within 4" of vertical face of the range for any installation below 80".

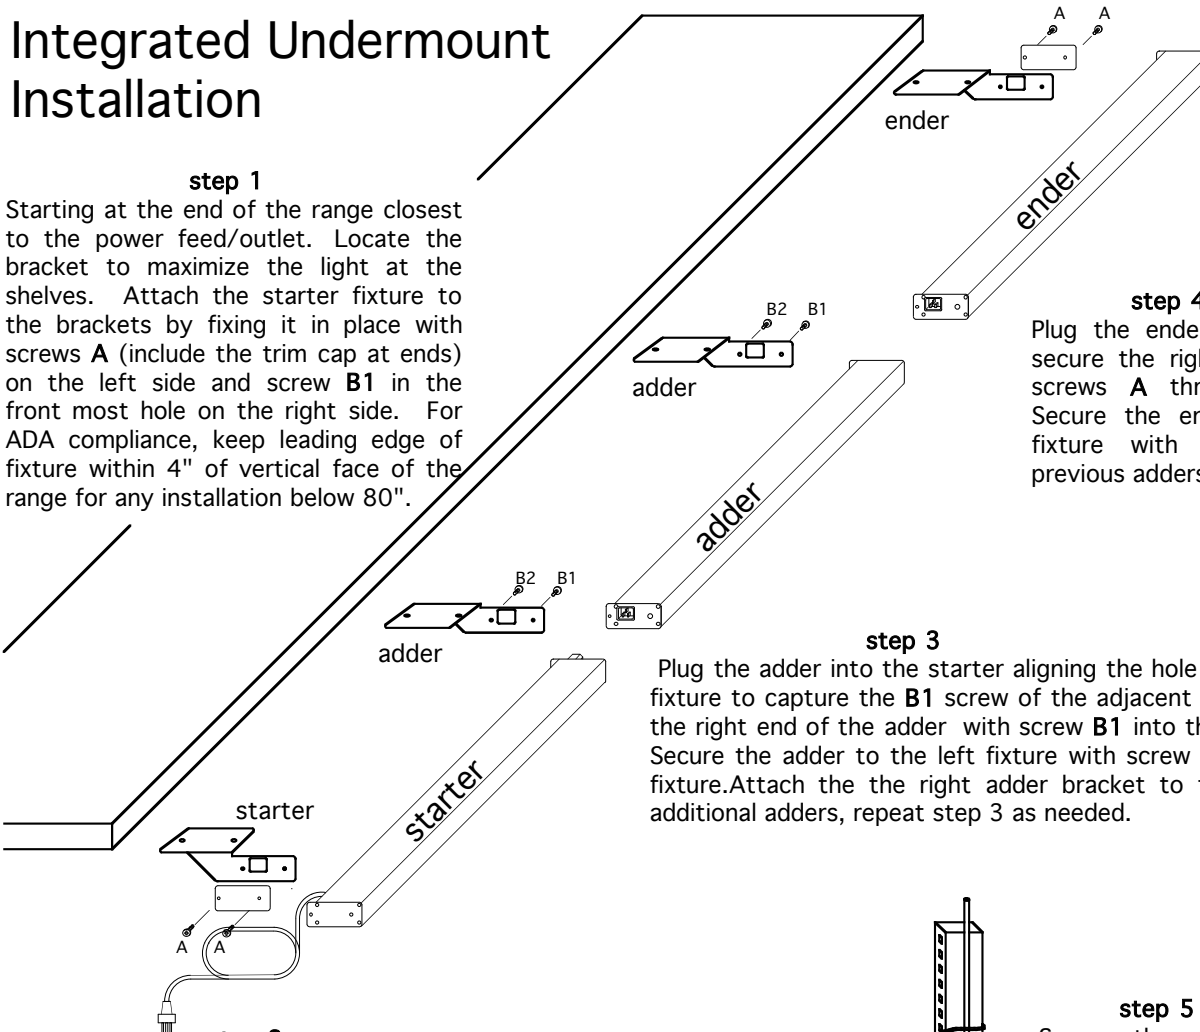

### step 2

After the starter fixture is attached to the brackets, attach the assembly to the underside of the canopy top, centering the fixture with the shelf.

### step 4

Plug the ender into the adder and secure the right end of adder with screws **A** through the trim cap. Secure the ender to adjacent left fixture with screw **B2** as with previous adders..

### step 3

Plug the adder into the starter aligning the hole in the left end of the fixture to capture the **B1** screw of the adjacent left fixture and secure the right end of the adder with screw **B1** into the next adder bracket. Secure the adder to the left fixture with screw **B2** in the back of the fixture. Attach the the right adder bracket to the canopy top. For additional adders, repeat step 3 as needed.

### step 5

Secure the power cord with the cable ties along the bracket and down the uprights or other suitable structure with cable ties in a neat manner.

